

Congratulations on your purchase of an Arnott® air suspension product. We at Arnott Incorporated are proud to offer a high quality product at the industry's most competitive pricing. Thank you for your confidence in us and our product.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

"Engineered to Ride, Built to Last®"



WARNING: *The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.*

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

GENERAL INFORMATION:

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at www.arnottinc.com.

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: *Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.*



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

DISCLAIMER:

THE PRODUCT SHOWN IN THE INSTALLATION STEPS BELOW MAY LOOK DIFFERENT THAN THE PART YOU ARE INSTALLING. THE INSTALLATION STEPS ARE THE SAME (UNLESS OTHERWISE NOTED) AND ALL NOTICES AND WARNINGS SHOULD BE ADHERED TO IN THE SAME MANNER.

AIR STRUT REMOVAL

1. SET STEERING TO STRAIGHT AHEAD.
2. RAISE VEHICLE.
3. REMOVE FRONT WHEEL. (FIGURE 1)



FIGURE 1

4. REMOVE ENGINE BAY TRIM PANEL TO ACCESS TOP OF AIR STRUT. (FIGURE 2)



FIGURE 2

5. REMOVE THE AIR LINE FITTING. (FIGURE 3)

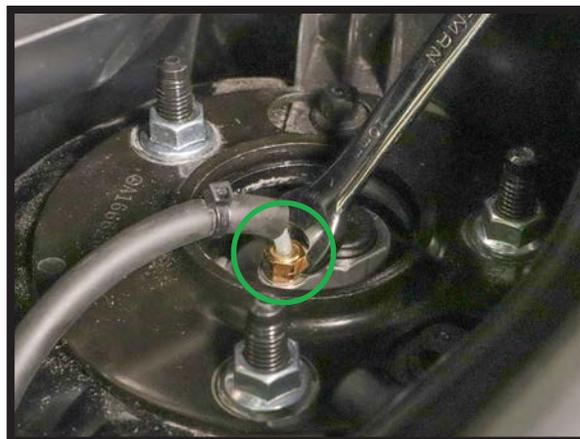


FIGURE 3

6. REMOVE THE THREE (3) TOP MOUNT NUTS. (FIGURE 4)



FIGURE 4

7. DISCONNECT STEERING KNUCKLE JOINT. (FIGURES 5, 6)



FIGURE 5



FIGURE 6

8. DISCONNECT SWAY BAR LINKAGE AND REMOVE. (FIGURES 7, 8)

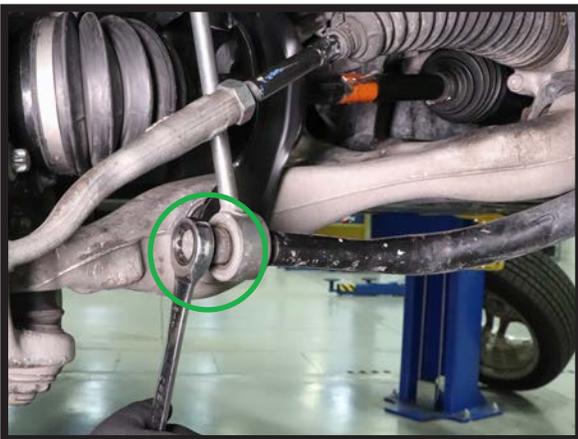


FIGURE 7



FIGURE 8

9. DISCONNECT AIR STRUT SOLENOID WIRE. REMOVE WIRE GUIDE AND UNROUTE BRAKE LINES. (FIGURES 9, 10)

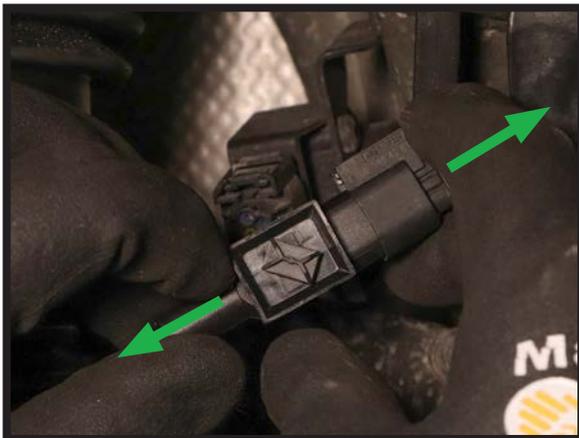


FIGURE 9



FIGURE 10

10. REMOVE LOWER STRUT MOUNT NUT. LEAVE THE BOLT IN PLACE. (FIGURE 11)



FIGURE 11

11. REMOVE AXLE NUT. (FIGURES 12, 13)



FIGURE 12



FIGURE 13

12. DISCONNECT UPPER WISHBONE BALL JOINT FROM SPINDLE. (FIGURES 14, 15)



FIGURE 14



FIGURE 15

13. SEPARATE AXLE FROM FRONT WHEEL BEARING. (FIGURE 16)



FIGURE 16

14. REMOVE BOTTOM STRUT MOUNT BOLT. (FIGURE 17)

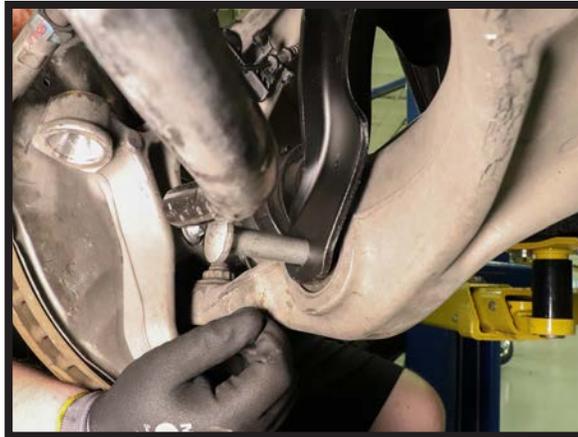


FIGURE 17

15. PULL OUT AXLE AND REMOVE AIR STRUT. (FIGURE 18, 19)



FIGURE 18



FIGURE 19

16. REMOVAL COMPLETE.

AIR STRUT INSTALLATION



Tighten all nuts and bolts to manufacturer's specifications during the installation process.

1. INSTALL THE VOSS FITTING FROM THE PROVIDED ACCESSORY KIT ON TO THE NEW ARNOTT AIR STRUT AND SNUG TIGHT WITH A WRENCH. REMOVE THE SHIPPING PIN. (FIGURES 20, 21, 22)



FIGURE 20



FIGURE 21



FIGURE 22

2. REMOVE EXISTING VOSS FITTING FROM THE VEHICLE AIR LINE AND DISCARD. USE THE FIGURE BELOW AS AN EXAMPLE. (FIGURE 23)

REMOVAL  Prior to inserting the existing air line into the new air fitting you will need to remove the old original equipment air line fitting.

NOTE: SCRATCHES AND/OR DEEP CUTS IN THE AIR LINE CAN RESULT IN POSSIBLE LEAKS. INSPECT THE AIR LINE BEFORE INSERTION. AIR LINE NEEDS TO BE REPLACED IF DAMAGED.

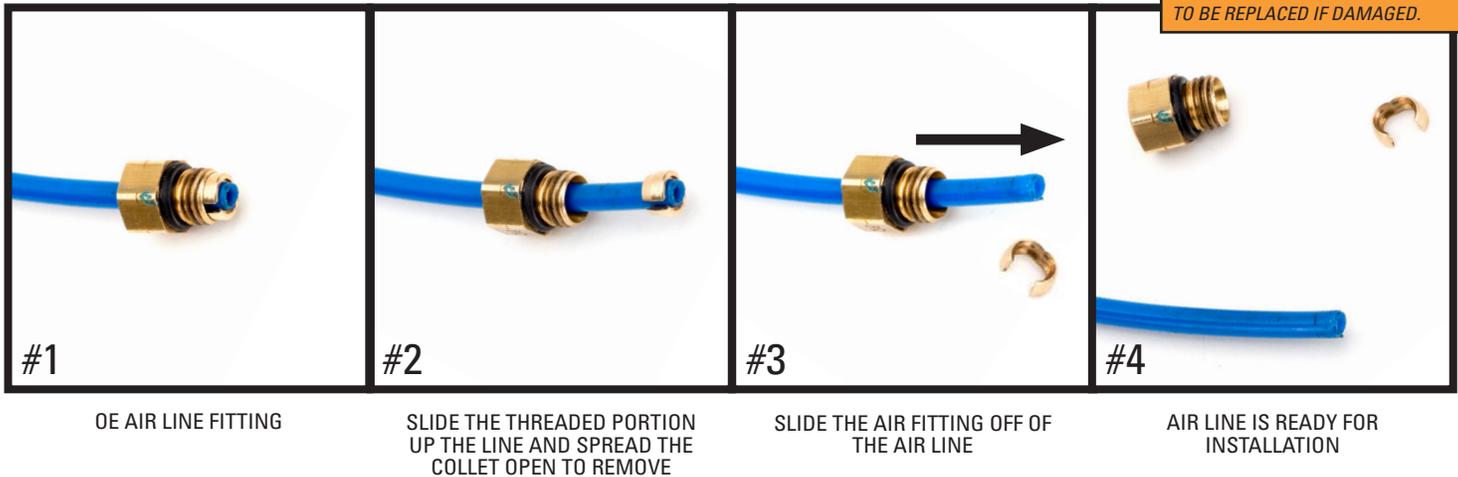


FIGURE 23

3. INSTALL NEW ARNOTT AIR STRUT AND GUIDE THE AXLE BACK INTO PLACE. INSTALL TOP MOUNT NUTS LOOSELY TO HOLD STRUT IN PLACE IF NECESSARY. (FIGURES 24, 25)



FIGURE 24



FIGURE 25

4. REINSTALL AXLE INTO FRONT WHEEL BEARING. (FIGURE 26)



FIGURE 26

5. REINSTALL SPINDLE ASSEMBLY AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 27)



FIGURE 27

6. REINSTALL BOTTOM STRUT MOUNT BOLT AND NUT AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURES 28, 29)



FIGURE 28



FIGURE 29

7. REINSTALL WIRE GUIDE AND REROUTE ALL LINES INCLUDING BRAKES. CONNECT STRUT SOLENOID WIRE. NOTE: THE WIRE GUIDE MAY NOT SIT PERFECTLY ON THE SHOCK BODY. USE ZIPTIES AS NEEDED TO SECURE THE WIRE GUIDE TO THE SHOCK. (FIGURES 30, 31, 32)



FIGURE 30

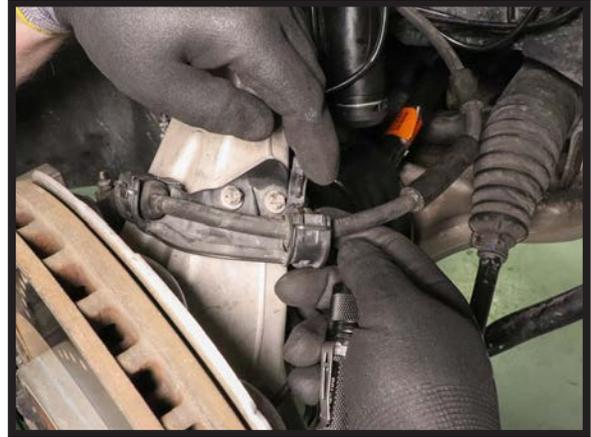


FIGURE 31

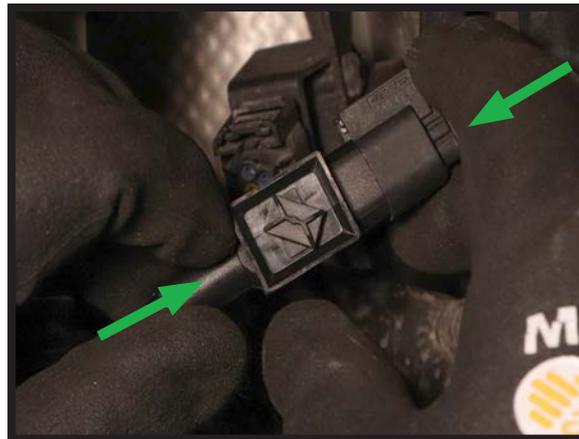


FIGURE 32

8. REINSTALL SWAY BAR LINKAGE AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURES 33, 34)

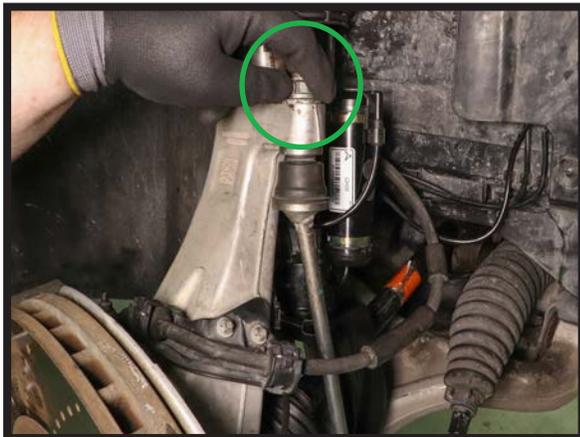


FIGURE 33

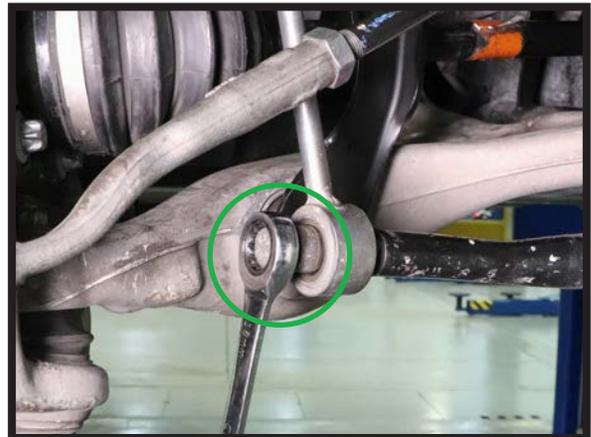


FIGURE 34

9. REINSTALL STEERING KNUCKLE JOINT AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURES 35, 36)

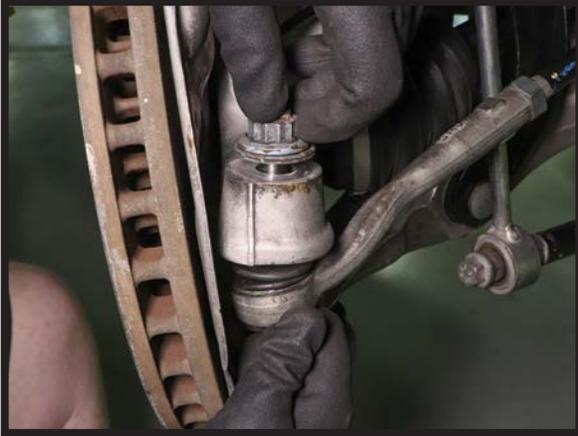


FIGURE 35



FIGURE 36

10. REINSTALL AXLE NUT AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 37)



FIGURE 37

11. REINSTALL THE THREE (3) TOP MOUNT NUTS AND TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 38)



FIGURE 38

12. CONNECT THE AIR LINE TO THE STRUT AIR FITTING. PUSH IN UNTIL LINE IS FIRMLY SEATED. (FIGURES 39, 40)



FIGURE 39



FIGURE 40

13. REINSTALL ENGINE BAY TRIM
14. REINSTALL FRONT WHEEL.
15. LOWER THE VEHICLE.
16. INSTALLATION COMPLETE.