



To alleviate an issue with constant power being drawn by the EBM, connect the T-tap and red wire of the EBM to pin location 7 (PINK) on the X12 (BROWN) connector, for a switched ignition power source.

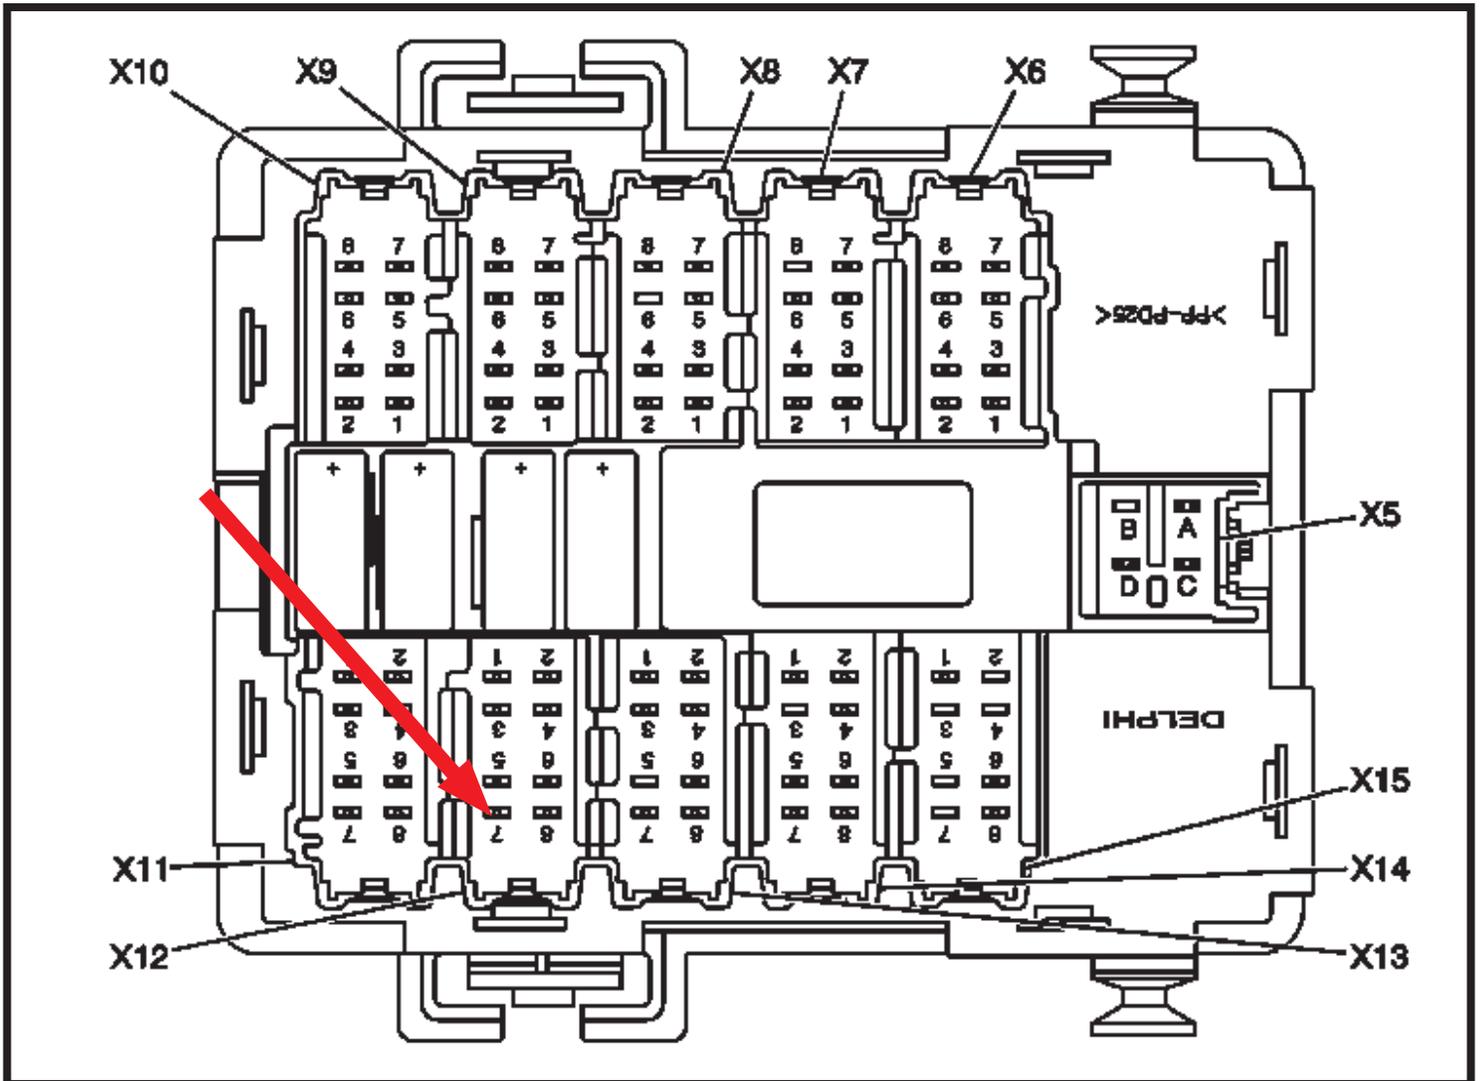

SEE REVERSE SIDE

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

The junction box illustrated below is located below the left side of the dash, to the left of the brake pedal.

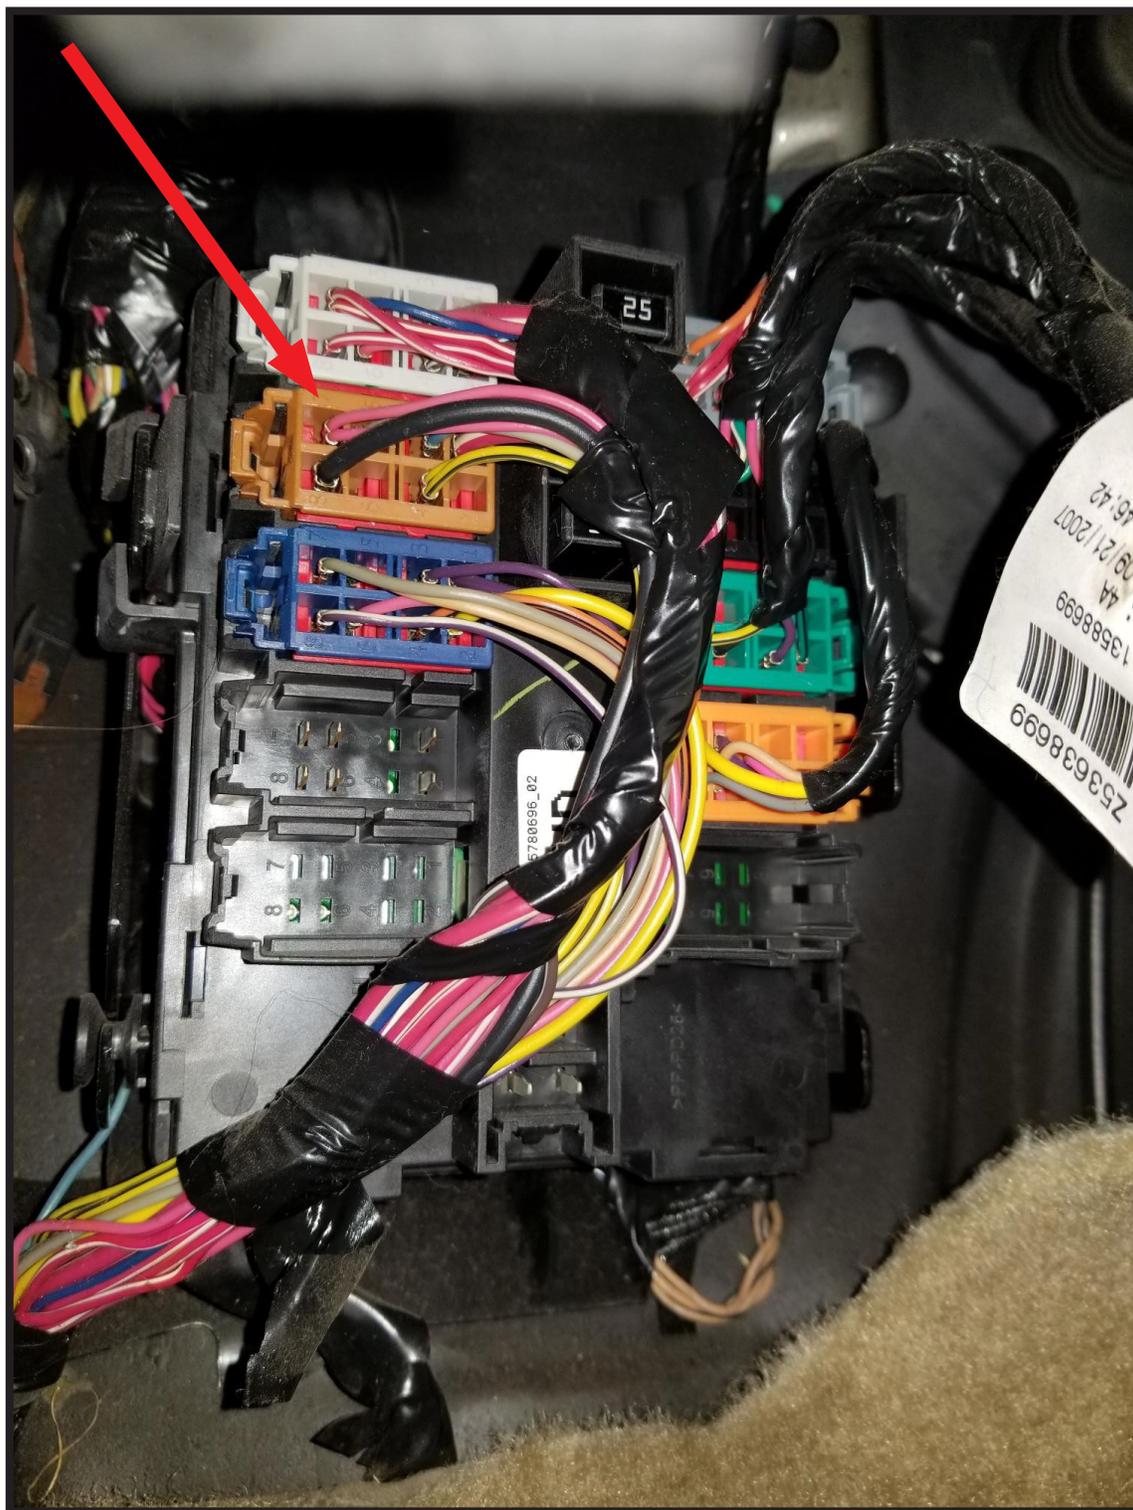

Amott® is committed to the quality of its products. If you have a question or problem with any Amott product, please contact Amott by calling [800-251-8993](tel:800-251-8993) during normal business hours or email techassistance@arnottinc.com.